





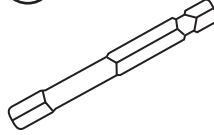

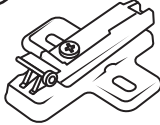










# ASSEMBLY INSTRUCTION


## MODEL: KADI-1200

Underbench for KUBE4W-1200 & KUBE4M-1200




### PARTS LIST

<b>1</b> 2 PCS  TOP & BOTTOM PANELS 998 x 896mm	<b>2</b> 4 PCS  GABLES 497 x 499 x 18mm	<b>3</b> 4 PCS  DOORS 463 x 494mm	<b>4</b> 16 PCS  DIRECTOR SCREW M7 x 50mm BLACK	<b>5</b> 1 PCE  SCREWDRIVER HEX INSERT 4 x 50mm	<b>6</b> 8 PCS  SALICE 200mm FULL OVERLAY HINGE
<b>7</b> 8 PCS  SALICE DOMI SNAP-ON 4mm MOUNTING PLATE	<b>8</b> 2 PCS  ELBOW CATCH SOLID BRASS	<b>9</b> 4 PCS  PARTICLEBOARD SCREW BRASS PLATED 4g x 16mm FOR CATCH	<b>10</b> 2 PCS  NEEDLE POINT SCREW 8g x 15mm FOR BRASS STRIKER	<b>11</b> 2 PCS  PROJECTION DRAWER LOCK	<b>12</b> 8 PCS  PARTICLEBOARD SCREW 6g x 19mm FOR LOCK
<b>13</b> 2 PCS  STRIKER PLATE 30 x 8mm	<b>14</b> 4 PCS  SELF-TAP SCREW PAN 5g x 13mm FOR STRIKER	<b>15</b> 4 PCS  45mm FIXING SCREWS FOR FIXING UNDERBENCH CABINETS TO FRAME	<b>16</b> 4 PCS  OPTIONAL FLAT D HANDLE	<b>17</b> 8 PCS  HANDLE SCREWS	

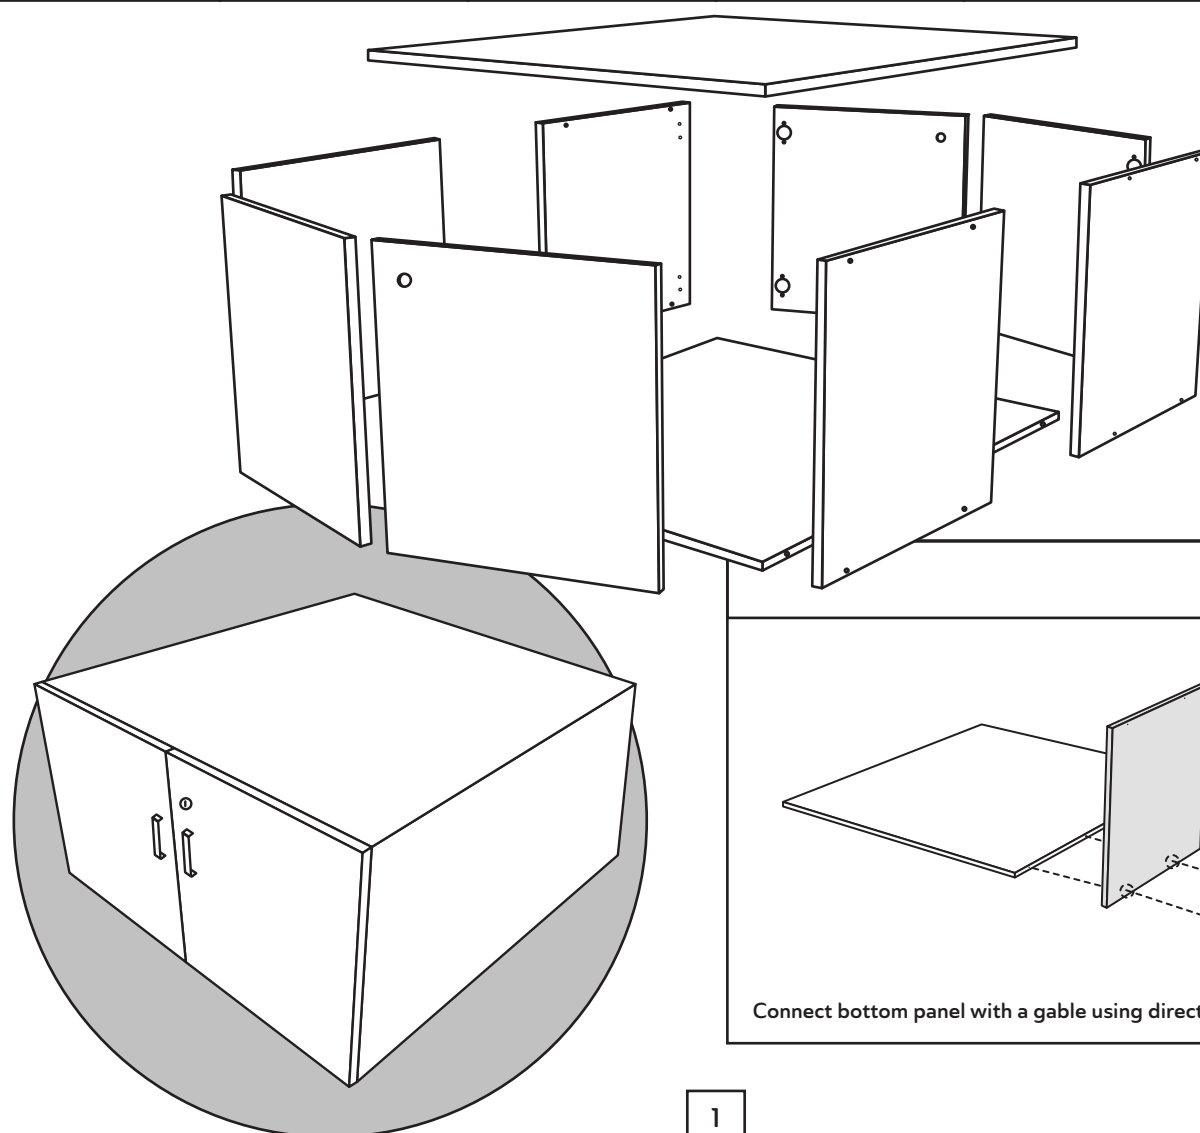


### STEP 1

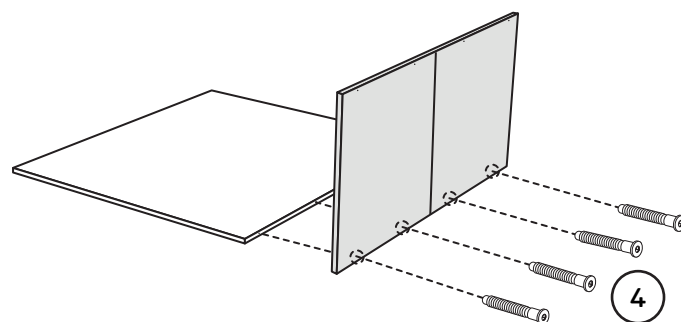


Connect bottom panel with a gable using director screws

## STEP 2

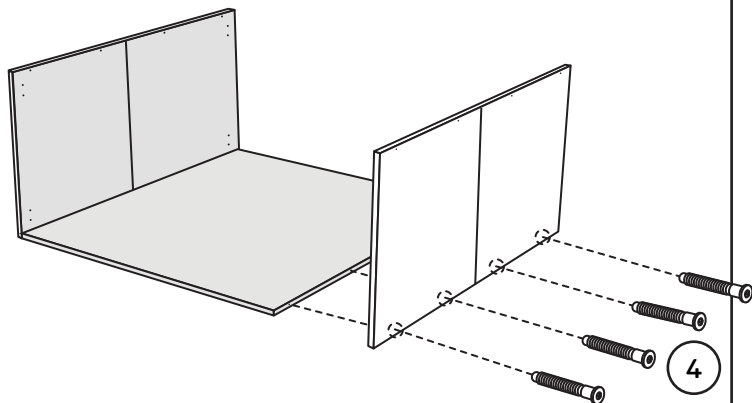


Repeat on the other side.

## STEP 3

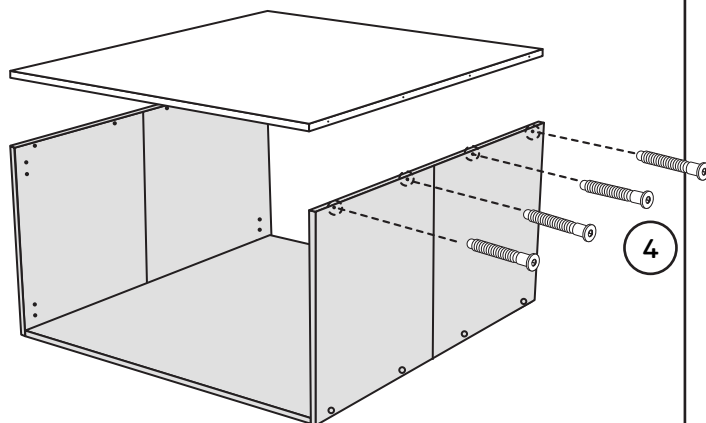

Add top panel with the remaining director screws, on both sides.


## STEP 4 Door Catches

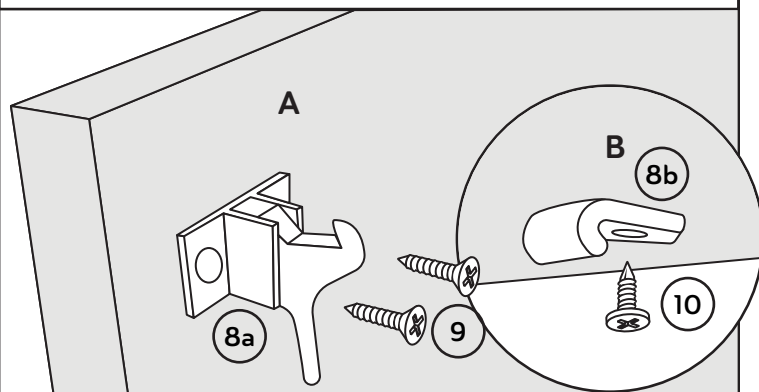

A. In the doors that do not have the through holes, connect catches into the pre-drilled holes.

B. Connect brass striker to top panel in pre-drilled hole. Ensure lip is pointing down to the catch.


## STEP 5 Door Locks

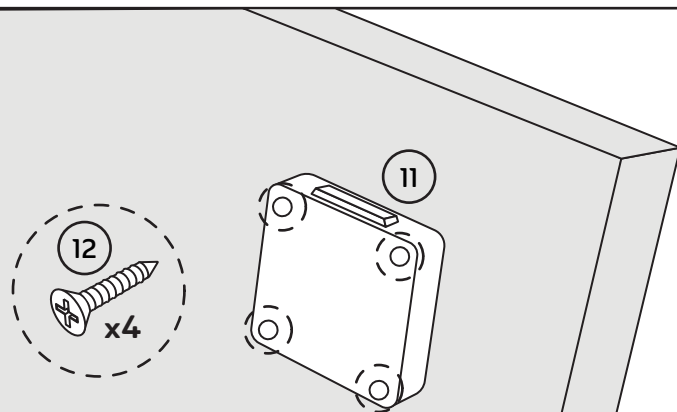

A. In the 2 doors with pre-drilled holes, insert lock module, and screw into place.

B. Screw striker plate into the pre-drilled holes in the top panel, ensuring that front lip is flush, and pointing down towards top of lock.

## STEP 6 (Optional Handles)


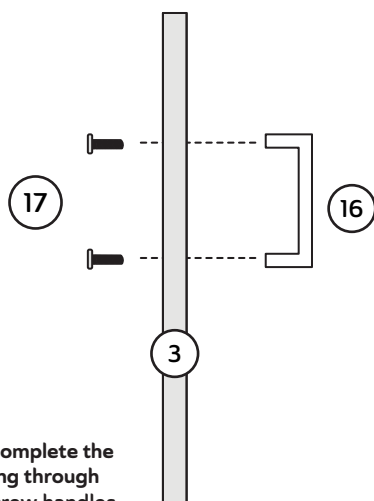


If handles are required, complete the inner pilot holes by drilling through the width of the door. Screw handles to doors.

## STEP 7 Door Hinges

A. Place overlay hinge into indents on the side of the doors, and screw into pre-drilled holes.

B. Connect the mounting plate using the pre-drilled holes in the side panels.

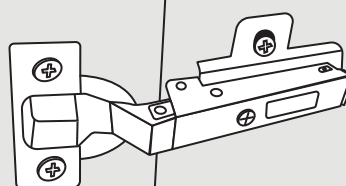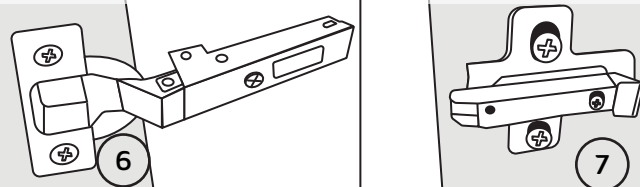

Slide and click overlay hinge over the mounting plate

## STEP 8

### Attach the shelf

Slide completed cabinet into place.

Fix Striker Plate (13) with Self-tapping screws (14) to pre-drilled holes

Open cabinet doors. In the pre-drilled holes screw the cabinet into the frame, both sides of the bench.

15

