
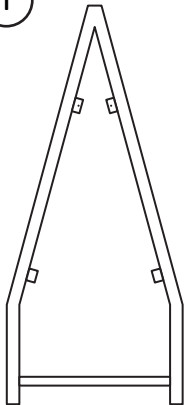





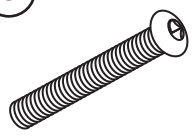


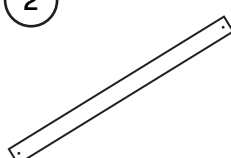



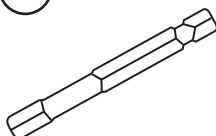




# ASSEMBLY INSTRUCTION

**MODEL: KARI-1200**

Mobile A-Frame Shadowboard



## PARTS LIST

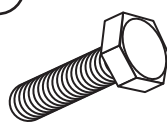1  SIDE A-FRAMES	2  BOTTOM RAIL	3  1200 x 1200 x 25mm FRONT PANELS	4  SIDE PANELS	5  TOP PANEL	6  BASE PANEL
7  M10 CROSS PIN FOR BENCH	8  BUTTON HEAD SCREW M10 x 70	9  100MM SWIVEL CASTORS	10  NEEDLE POINT SCREW 8g x 20mm	11  SELF-DRILLING SCREWS C/S 10g-24 x 30mm	
12  NEEDLE POINT SCREW 8g x 12mm	13  HEX SET SCREW M12 x 40	14  SPRINGWASHERS FOR CASTORS M12 21.1 x 2.5mm	15  6mm HEX BIT FOR FRAME ASSEMBLY	16  CHIPBOARD SCREW 8g x 45mm	

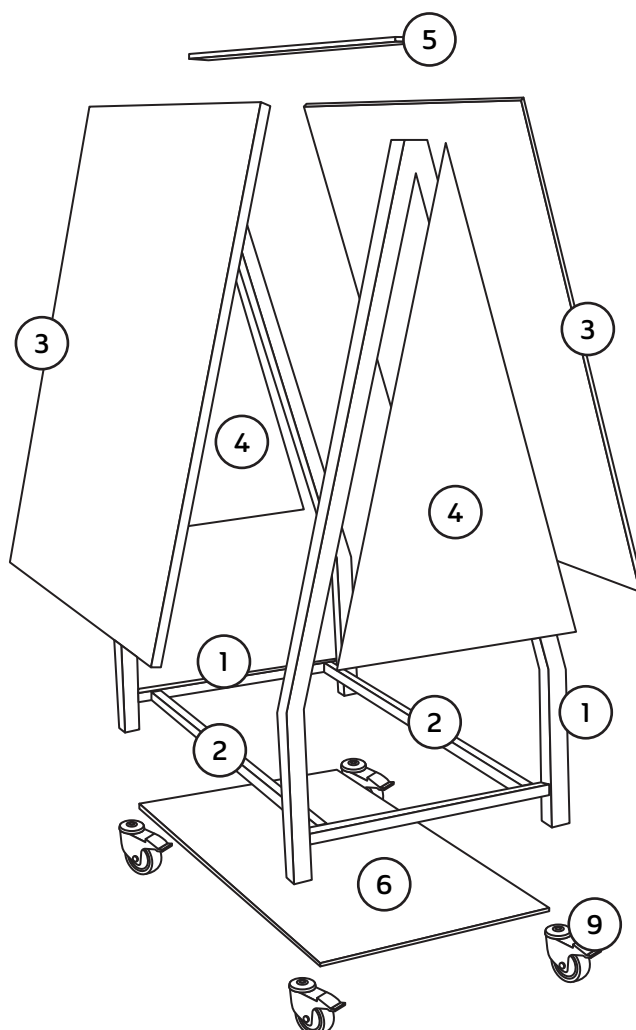


## STEP 1

Join the leg assemblies.  
Start with single bottom rail (as shown)

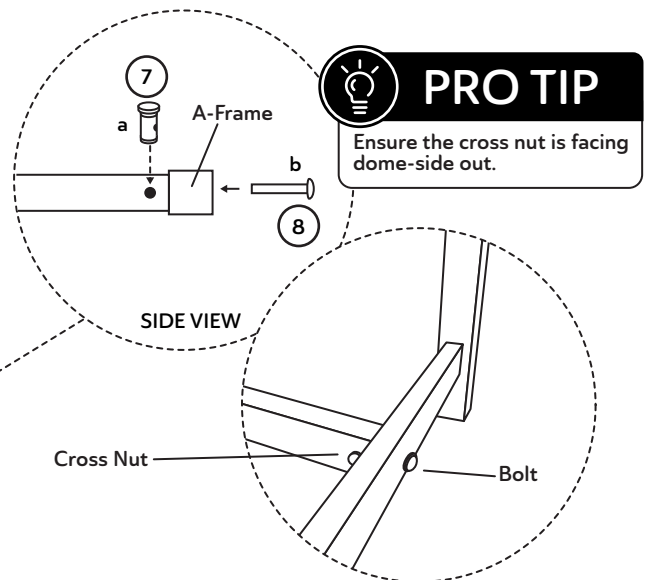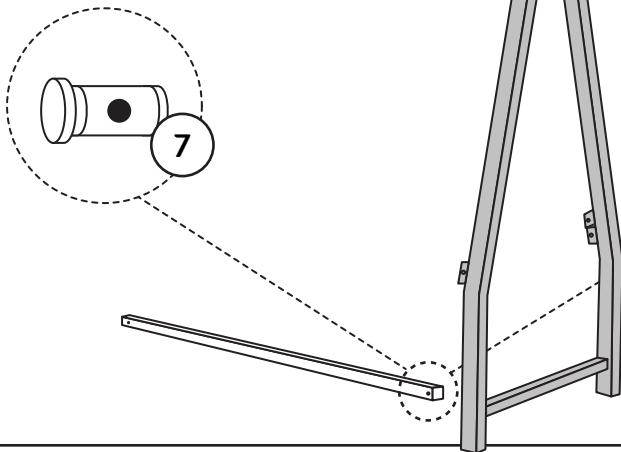


Insert the cross nut into the rail and thread the bolt through the leg frame into the cross nut. Keep these bolts loose until all the other rails are installed.

## STEP 2

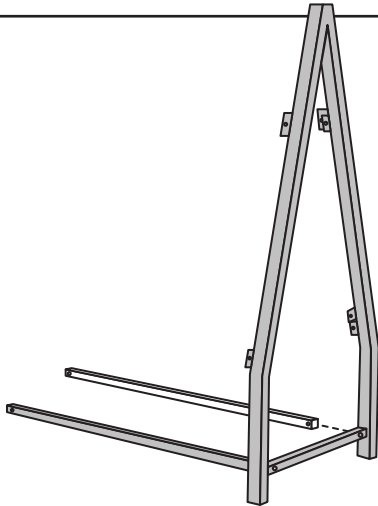


Repeat procedure for remaining rail.

## STEP 3

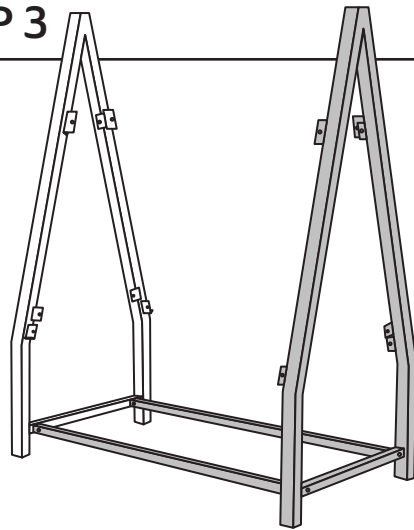


Attach second A-Frame using the above techniques.

## STEP 4

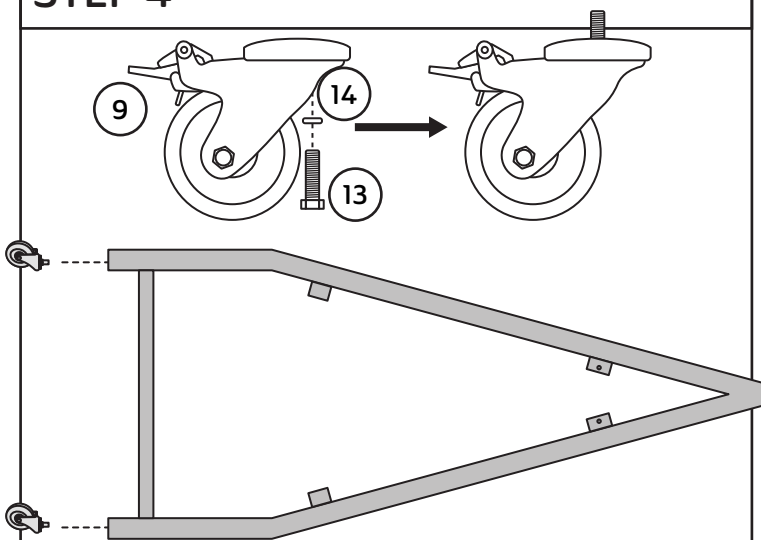


Gently place the A-Frame on its side, and screw in the castors through the pre-drilled holes

## STEP 5

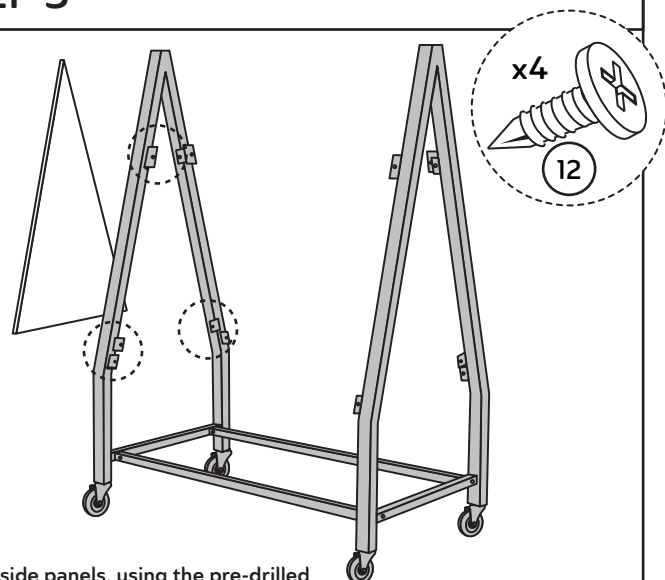


Screw side panels, using the pre-drilled holes.


## STEP 6

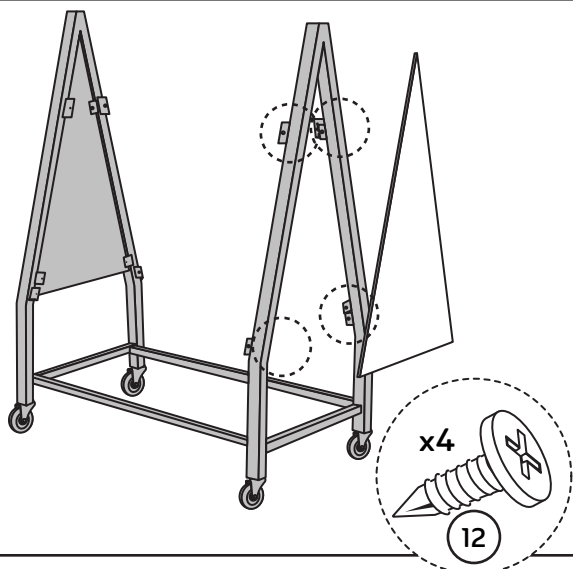


## STEP 7

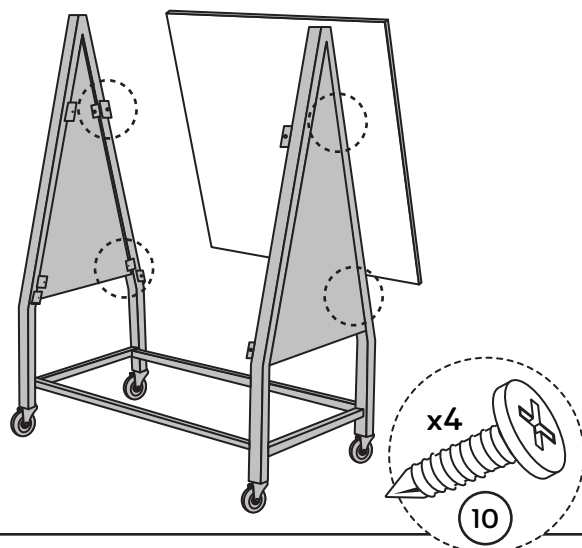


## STEP 8

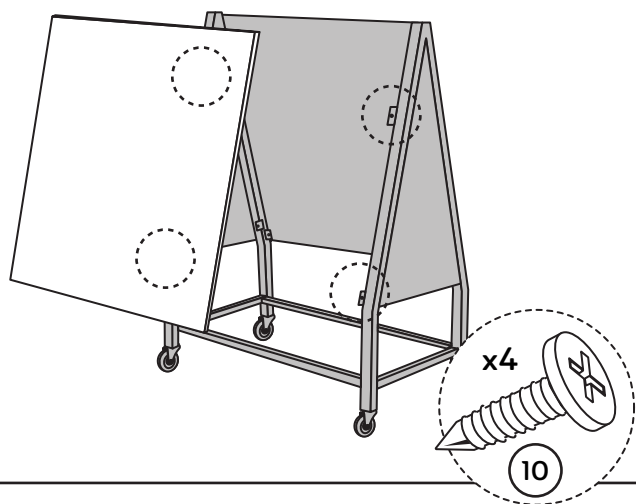

## STEP 9

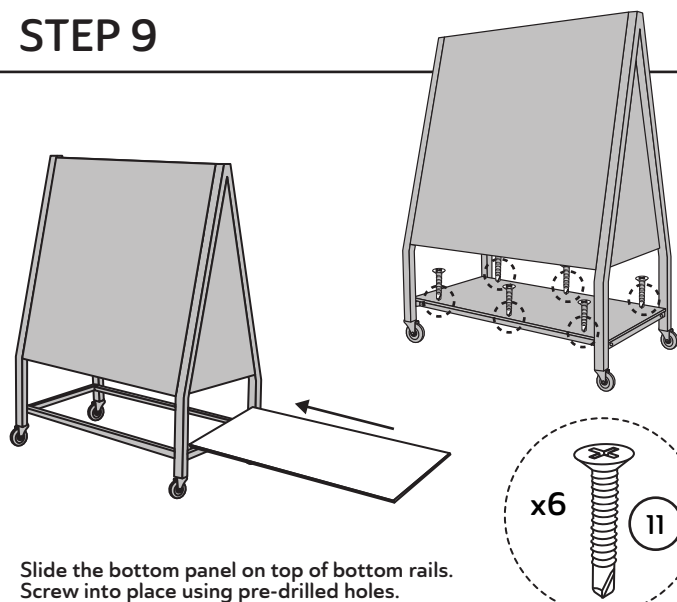

## STEP 10

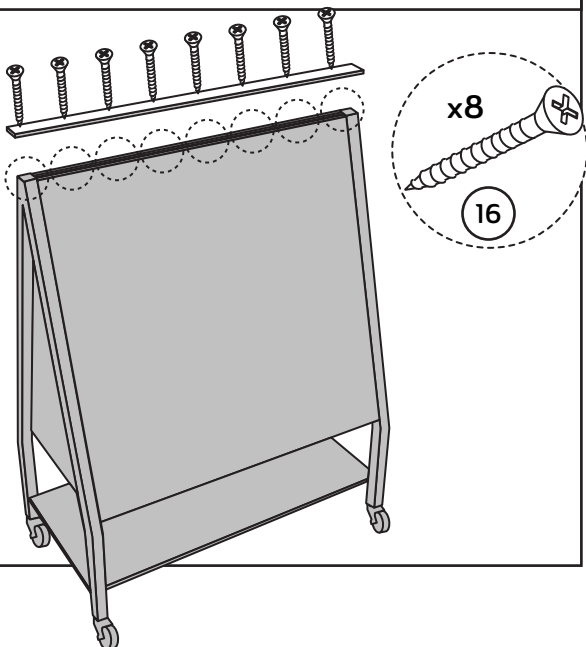

## STEP 11

